


# Daemon II Operation Manual - Water Temp. Gauge

**Package Contents** Gauge\*1 / Temp Sensor\*1 / Sensor Wire(2pin)\*1 / Power Box\*1 / Gauge Wire (6pin)\*1 / Gauge Stand\*1 / Operation Manual\*1

## Installation Diagram


### Suggestions Before Installation

1. Cut the radiator hose to fit the length of water adaptor.
2. Install the Temp. Sensor to water adaptor first.

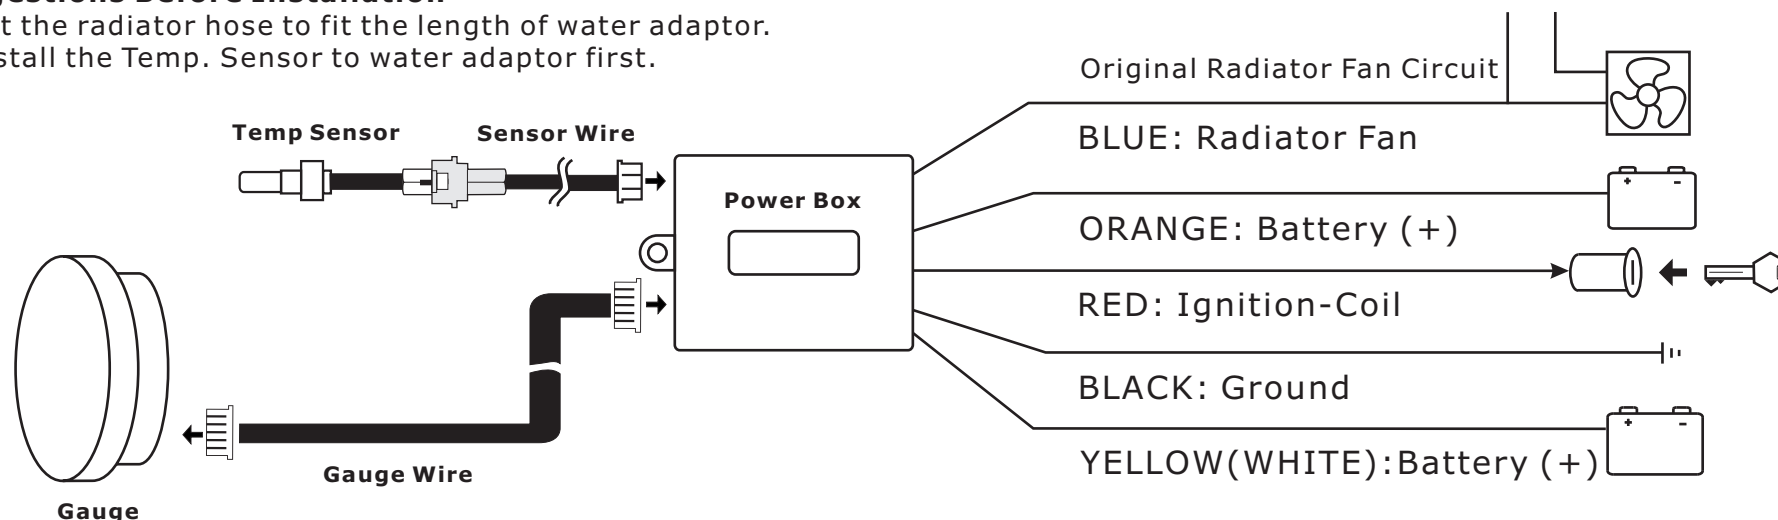

To avoid damage, please ensure the RED wire is attached to the ignition switch that connected to Coil.

## Ignition Switch Diagram

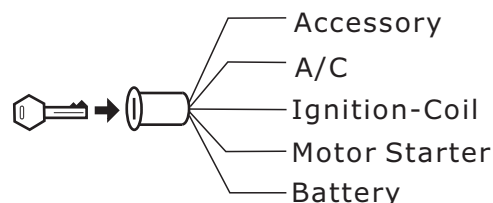

### ⚠ WARNING


1. Please must follow all installations in this manual to ensure safe installation and operation of the product.
2. DO NOT disassemble or reassemble the product. This might cause damage or make them unsafe to use. When the product is disassembled or reassembled, the Warranty can't be offered.
3. Before installation, please make sure the engine is switched off and the vehicle is stationary.
4. Due to possible injury from contact with a hot engine or exhaust pipe, DO NOT begin installation until the vehicle is cool.
5. When attaching wires for the product, please take care so that the product's wires do not interfere with existing wires.
6. This product is only for use on vehicles with 12V electronic system.

### ⚠ CAUTION

1. Please refer to the original wire of radiator fan. If the fan is controlled by "+" terminal, please attach the ORANGE wire to "+". If it is controlled by "-" terminal, then attach the ORANGE wire to "-".
2. To avoid water leaks during installation of the sensor, please use Telfon tape while installation.
3. To avoid water leaks, please ensure the size of water adaptor is suited.
4. To avoid damage, please make sure using insulating tape or bushing while connection.
5. To avoid damage of sensor wire, please fix the waterproof connector on the vehicle body.
6. Coolant spills by the installation work. Please replenish the engine with coolant and bleed the air from the system, or, the engine might overheat.

# Remote Controller Operation Manual - Water Temp. Gauge





## **Tips of Remote Controller Operation**

1. Please have the remote controller point to the gauge you are going to set up.
2. In setting process, idle any button for 5 seconds or press  directly; the gauge will leave setting mode and save automatically.
3. A "beep" sound will be heard while the new setting is done.






### **• Sensor Failure warning Function**

After Booting, the gauge buzzer will show the warning sound about 20 seconds if the sensor is failed.







### **• Color Setting**

1. Select Water Temp. Gauge icon by press  on Remote Controller.
2. Then press  for entering the color selection mode. Again, press the  for different color selection. Press  or idle any button for 5 seconds to leave the setting mode.





### **• Brightness Adjust Setting**

1. Select Water Temp. Gauge icon by press  on Remote Controller.
2. Then press  for entering the color selection mode. Long press  to increase the brightness or long press  to decrease. Press  or idle any button for 5 seconds to leave the setting mode.





 
### **• Warning Value Setting (When the value is exceeded, the warning will be functional)**

1. Select Water Temp. Gauge icon by press  on Remote Controller.
2. Press  or  for entering the warning setting mode. Press  or  to adjust the warning value. Press  or idle any button for 5 seconds to leave the setting mode.

### **• Peak Value Setting**

1. Select Water Temp. Gauge icon by press  on Remote Controller.
2. Press  to display peak value record, or, press  to clear peak value record. Press  or idle any button for 5 seconds to leave the setting mode.


### **• Radiator Fan Control Setting (When the value is exceeded, the radiator fan will be compulsively started )**

1. Select Water Temp. Gauge icon by press  on Remote Controller.
2. Press  to activate Radiator Fan function. Press  to increase the fan control temp, or, press  to decrease. Press  or idle any button for 5 seconds to leave the setting mode.

# Daemon II Operation Manual - Oil Temp. Gauge


**Package Contents** Gauge\*1 / Temp Sensor\*1 / Sensor Wire(2pin)\*1 / Power Box\*1 / Gauge Wire (6pin)\*1 / Gauge Stand\*1 / Operation Manual\*1

## Installation Diagram

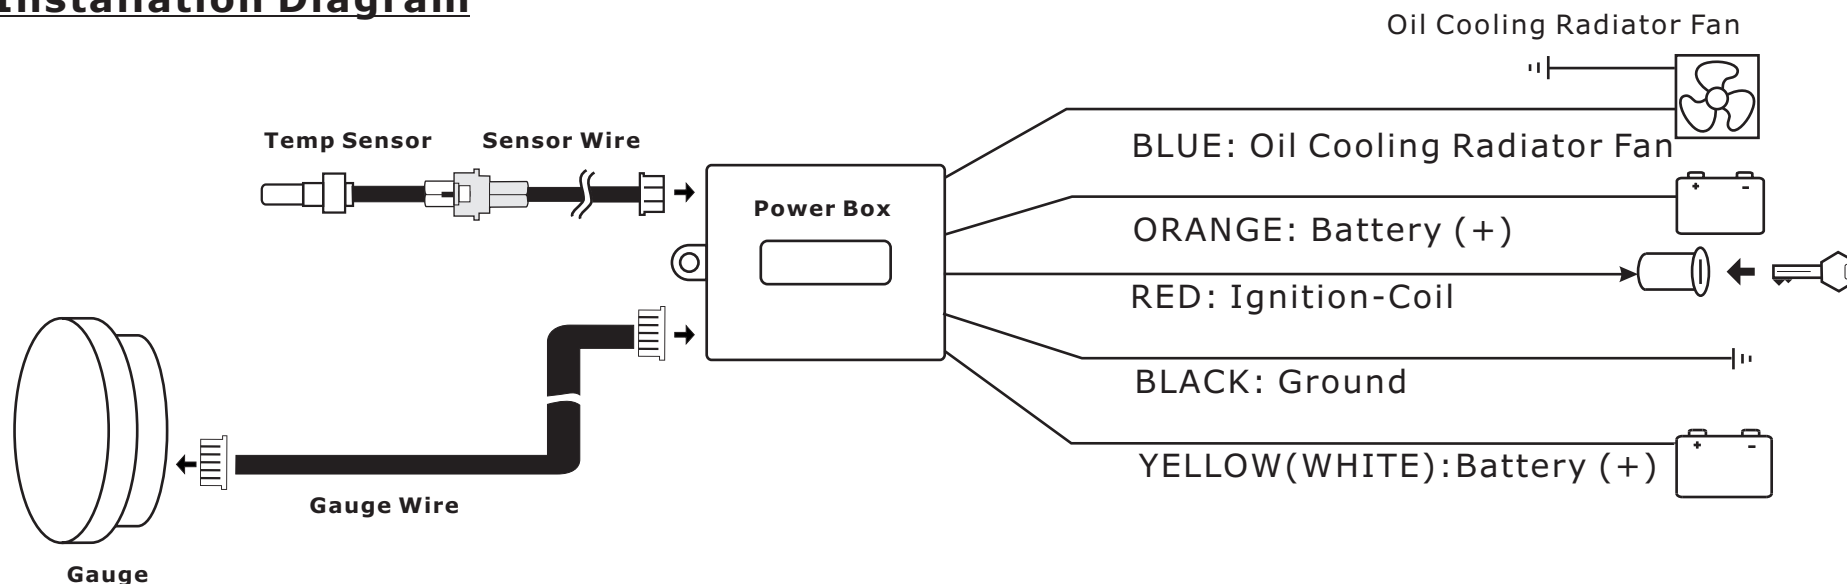

To avoid damage, please ensure the RED wire is attached to the ignition switch that connected to Coil.

## Ignition Switch Diagram

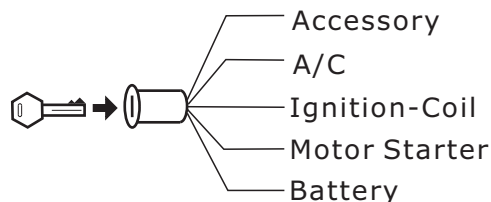

### WARNING


1. Please must follow all installations in this manual to ensure safe installation and operation of the product.
2. DO NOT disassemble or reassemble the product. This might cause damage or make them unsafe to use. When the product is disassembled or reassembled, the Warranty can't be offered.
3. Before installation, please make sure the engine is switched off and the vehicle is stationary.
4. Due to possible injury from contact with a hot engine or exhaust pipe, DO NOT begin installation until the vehicle is cool.
5. When attaching wires for the product, please take care so that the product's wires do not interfere with existing wires.
6. This product is only for use on vehicles with 12V electronic system.

### CAUTION

1. Please refer to the original wire of radiator fan.  
If the fan is controlled by "+" terminal, please attach the ORANGE wire to "+".  
If it is controlled by "-" terminal, then attach the ORANGE wire to "-".
2. To avoid oil leaks during installation of sensor, please use Telfon tape while installation.  
Before driving, inspect tubing and oil blocks for leaks. Leaks could cause a fire or damage the engine.
3. To avoid oil leaks, please ensure the size of adaptor is suited.
4. To avoid damage, please make sure using insulating tape or bushing while connection.
5. To avoid damage of sensor wire, please fix the waterproof connector on the vehicle body.
6. Oil spills by the installation work. Please replenish the engine with oil. The engine might overheat when oil is too little.

# Remote Controller Operation Manual - Oil Temp. Gauge





## **Tips of Remote Controller Operation**

1. Please have the remote controller point to the gauge you are going to set up.
2. In setting process, idle any button for 5 seconds or press  directly; the gauge will leave setting mode and save automatically.
3. A "beep" sound will be heard while the new setting is done.






### **• Sensor Failure warning Function**

After Booting, the gauge buzzer will show the warning sound about 20 seconds if the sensor is failed.







### **• Color Setting**

1. Select Oil Temp. Gauge icon by press  on Remote Controller.
2. Then press  for entering the color selection mode. Again, press the  for different color selection. Press  or idle any button for 5 seconds to leave the setting mode.





### **• Brightness Adjust Setting**

1. Select Oil Temp. Gauge icon by press  on Remote Controller.
2. Then press  for entering the color selection mode. Long press  to increase the brightness or long press  to decrease. Press  or idle any button for 5 seconds to leave the setting mode.






### **• Warning Value Setting (When the value is exceeded, the warning will be functional)**

1. Select Oil Temp. Gauge icon by press  on Remote Controller.
2. Press  or  for entering the warning setting mode. Press  or  to adjust the warning value. Press  or idle any button for 5 seconds to leave the setting mode.

### **• Peak Value Setting**

1. Select Oil Temp. Gauge icon by press  on Remote Controller.
2. Press  to display peak value record, or, press  to clear peak value record. Press  or idle any button for 5 seconds to leave the setting mode.


### **• Radiator Fan Control Setting (When the value is exceeded, the radiator fan will be compulsively started )**

1. Select Oil Temp. Gauge icon by press  on Remote Controller.
2. Press  to activate Radiator Fan function. Press  to increase the fan control temp, or, press  to decrease. Press  or idle any button for 5 seconds to leave the setting mode.

# Daemon II Operation Manual - Oil Press. Gauge


**Package Contents** Gauge\*1 / Pressure Sensor\*1 / Sensor Wire(3pin)\*1 / Power Box\*1 / Gauge Wire (6pin)\*1 / Gauge Stand\*1 / Operation Manual\*1

## Installation Diagram

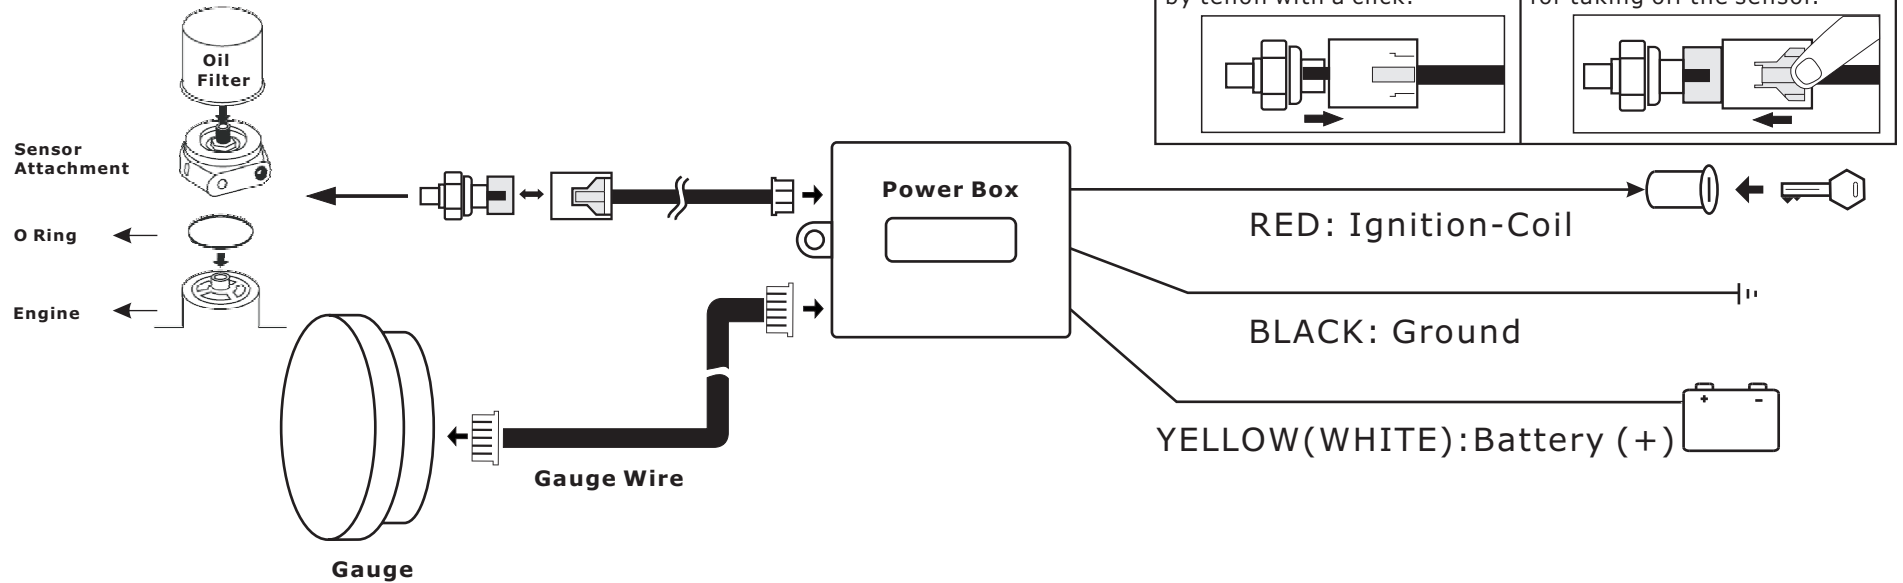

To avoid damage, please ensure the RED wire is attached to the ignition switch that connected to Coil.

## Ignition Switch Diagram

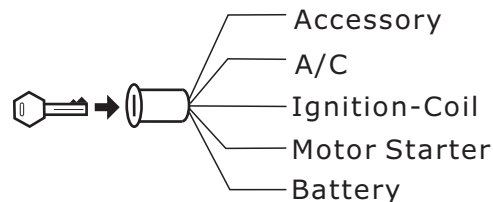

### ⚠ WARNING


1. Please must follow all installations in this manual to ensure safe installation and operation of the product.
2. DO NOT disassemble or reassemble the product. This might cause damage or make them unsafe to use. When the product is disassembled or reassembled, the Warranty can't be offered.
3. Before installation, please make sure the engine is switched off and the vehicle is stationary.
4. Due to possible injury from contact with a hot engine or exhaust pipe, DO NOT begin installation until the vehicle is cool.
5. When attaching wires for the product, please take care so that the product's wires do not interfere with existing wires.
6. This product is only for use on vehicles with 12V electronic system.

### ⚠ CAUTION

1. To avoid oil leaks during installation of sensor, please use Telfon tape while installation. Before driving, inspect tubing and oil blocks for leaks. Leaks could cause a fire or damage the engine.
2. To avoid oil leaks, please ensure the size of adaptor is suited.
3. To avoid the damage of sensor wire, please fix the waterproof connector on the vehicle body.
4. Oil spills by the installation work. Please replenish the engine with oil. The engine might overheat when oil is too little.

# Remote Controller Operation Manual - Oil Press. Gauge





## Tips of Remote Controller Operation

1. Please have the remote controller point to the gauge you are going to set up.
2. In setting process, idle any button for 5 seconds or press  directly; the gauge will leave setting mode and save automatically.
3. A "beep" sound will be heard while the new setting is done.






### • Sensor Failure warning Function

After Booting, the gauge buzzer will show the warning sound about 20 seconds if the sensor is failed.







### • Color Setting

1. Select Oil Press. Gauge icon by press  on Remote Controller.
2. Then press  for entering the color selection mode. Again, press the  for different color selection. Press  or idle any button for 5 seconds to leave the setting mode.





### • Brightness Adjust Setting

1. Select Oil Press. Gauge icon by press  on Remote Controller.
2. Then press  for entering the color selection mode. Long press  to increase the brightness or long press  to decrease. Press  or idle any button for 5 seconds to leave the setting mode.

### • Warning Value Setting (When the value is below, the warning will be functional)

1. Select Oil pressure Gauge icon by press  on Remote Controller.
2. Press  or  for entering the warning setting mode. Press  or  to adjust the warning value. Press  or idle any button for 5 seconds to leave the setting mode.


### • Peak Value Setting

1. Select Oil Press. Gauge icon by press  on Remote Controller.
2. Press  to display peak value record, or, press  to clear peak value record. Press  or idle any button for 5 seconds to leave the setting mode.

# Daemon II Operation Manual - Fuel Press. Gauge


**Package Contents** Gauge\*1 / Fuel Pressure Sensor\*1 / Sensor Wire(3pin)\*1 / Power Box\*1 / Gauge Wire (6pin)\*1 / Gauge Stand\*1 / Operation Manual\*1

## Installation Diagram

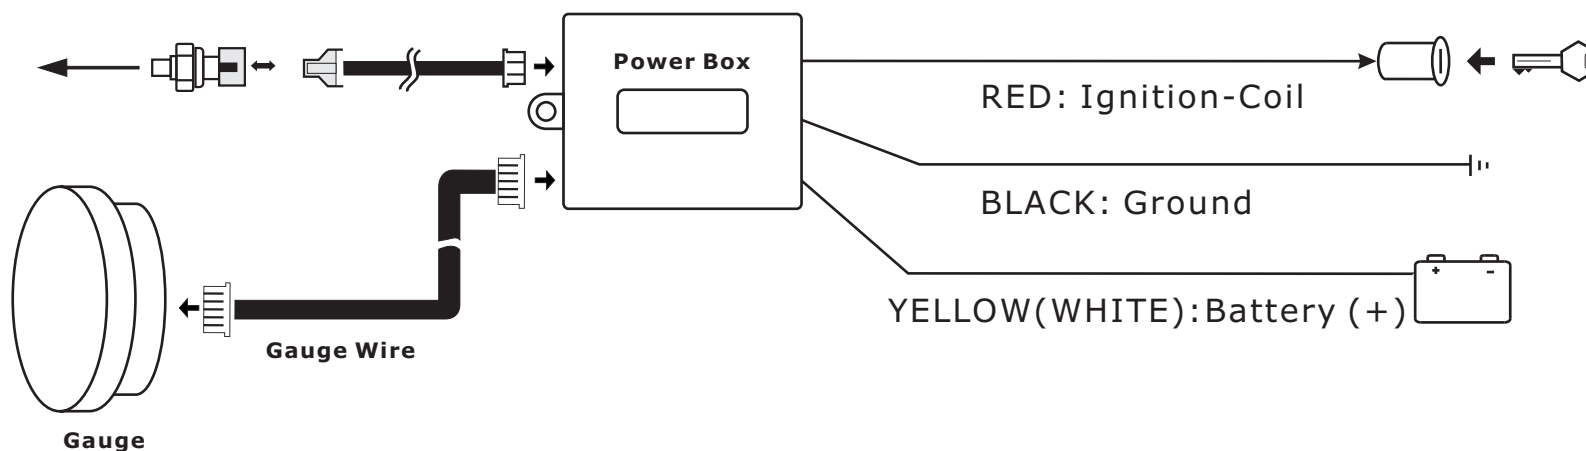

To avoid damage, please ensure the RED wire is attached to the ignition switch that connected to Coil.

## Ignition Switch Diagram

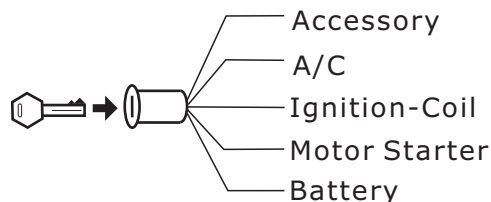

### ⚠ WARNING


1. Please must follow all installations in this manual to ensure safe installation and operation of the product.
2. DO NOT disassemble or reassemble the product. This might cause damage or make them unsafe to use. When the product is disassembled or reassembled, the Warranty can't be offered.
3. Before installation, please make sure the engine is switched off and the vehicle is stationary.
4. Due to possible injury from contact with a hot engine or exhaust pipe, DO NOT begin installation until the vehicle is cool.
5. When attaching wires for the product, please take care so that the product's wires do not interfere with existing wires.
6. This product is only for use on vehicles with 12V electronic system.

### ⚠ CAUTION

1. To avoid oil leaks during installation of sensor, please use Telfon tape while installation. Before driving, inspect tubing and fuel blocks for leaks. Leaks could cause a fire or damage the engine.
2. To avoid fuel leaks, please ensure the size of adaptor is suited.
3. To avoid the damage of sensor wire, please fix the waterproof connector on the vehicle body.
4. Oil spills by the installation work. Please replenish the engine with oil. The engine might overheat when oil is too little.

# Remote Controller Operation Manual - Fuel Press. Gauge





## Tips of Remote Controller Operation

1. Please have the remote controller point to the gauge you are going to set up.
2. In setting process, idle any button for 5 seconds or press  directly; the gauge will leave setting mode and save automatically.
3. A "beep" sound will be heard while the new setting is done.






### • Sensor Failure warning Function

After Booting, the gauge buzzer will show the warning sound about 20 seconds if the sensor is failed.







### • Color Setting

1. Select Oil Press. Gauge icon by press  on Remote Controller.
2. Then press  for entering the color selection mode. Again, press the  for different color selection. Press  or idle any button for 5 seconds to leave the setting mode.





### • Brightness Adjust Setting

1. Select Oil Press. Gauge icon by press  on Remote Controller.
2. Then press  for entering the color selection mode. Long press  to increase the brightness or long press  to decrease. Press  or idle any button for 5 seconds to leave the setting mode.

### • Warning Value Setting (When the value is below, the warning will be functional)

1. Select Oil pressure Gauge icon by press  on Remote Controller.
2. Press  or  for entering the warning setting mode. Press  or  to adjust the warning value. Press  or idle any button for 5 seconds to leave the setting mode.

### • Peak Value Setting

1. Select Oil Press. Gauge icon by press  on Remote Controller.
2. Press  to display peak value record, or, press  to clear peak value record. Press  or idle any button for 5 seconds to leave the setting mode.




# Daemon II Operation Manual - Boost Gauge

**Package Contents** Gauge\*1 / Sensor\*1 / Sensor Wire(3pin)\*1 / Power Box\*1 / Gauge Wire (6pin)\*1 / Air Filter\*1  
Three Way Joint\*1 / Rubber Hose\*1 / Gauge Stand\*1 / Operation Manual\*1

## Installation Diagram (Need Turbo Timer)


### ATTENTION!!!

1. Please avoid install sensor nearby heat.
2. To avoid engine stop due to wires loosen, please ensure tip up wires while installing turbo timer function.
3. To avoid Sensor failed due to fuel gas, please install the Air filter

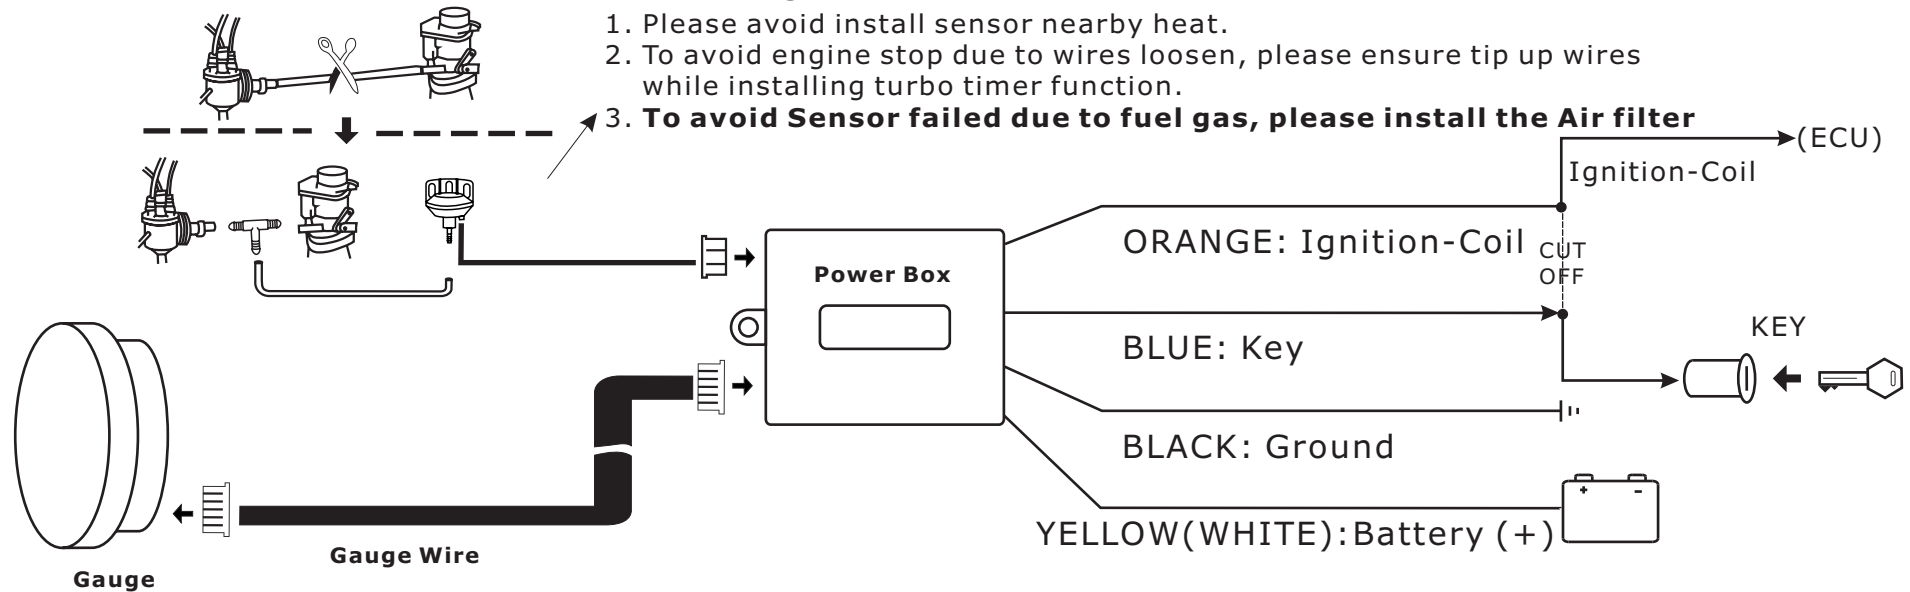

To avoid damage, please ensure the ORANGE wire is attached to the ignition switch that connected to Coil.

## Ignition Switch Diagram

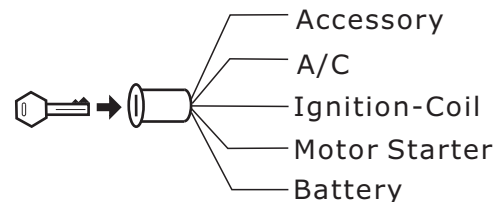

### ⚠ WARNING

1. Please must follow all installations in this manual to ensure safe installation and operation of the product.
2. DO NOT disassemble or reassemble the product. This might cause damage or make them unsafe to use. When the product is disassembled or reassembled, the Warranty can't be offered.
3. Before installation, please make sure the engine is switched off and the vehicle is stationary.
4. Due to possible injury from contact with a hot engine or exhaust pipe, DO NOT begin installation until the vehicle is cool.
5. When attaching wires for the product, please take care so that the product's wires do not interfere with existing wires.
6. This product is only for use on vehicles with 12V electronic system.


### ⚠ CAUTION

1. Please avoid install sensor nearby heat.
2. To avoid disconnection of rubber hose during pipe installation, suggest using tie-wraps to tie up.
3. To avoid engine stop due to wires loosen, please ensure tip up wires while installing turbo timer function.

# Daemon II Operation Manual - Boost Gauge


**Package Contents** Gauge\*1 / Sensor\*1 / Sensor Wire(3pin)\*1 / Power Box\*1 / Gauge Wire (6pin)\*1 / Air Filter\*1  
Three Way Joint\*1 / Rubber Hose\*1 / Gauge Stand\*1 / Operation Manual\*1

## Installation Diagram (No Need Turbo Timer)

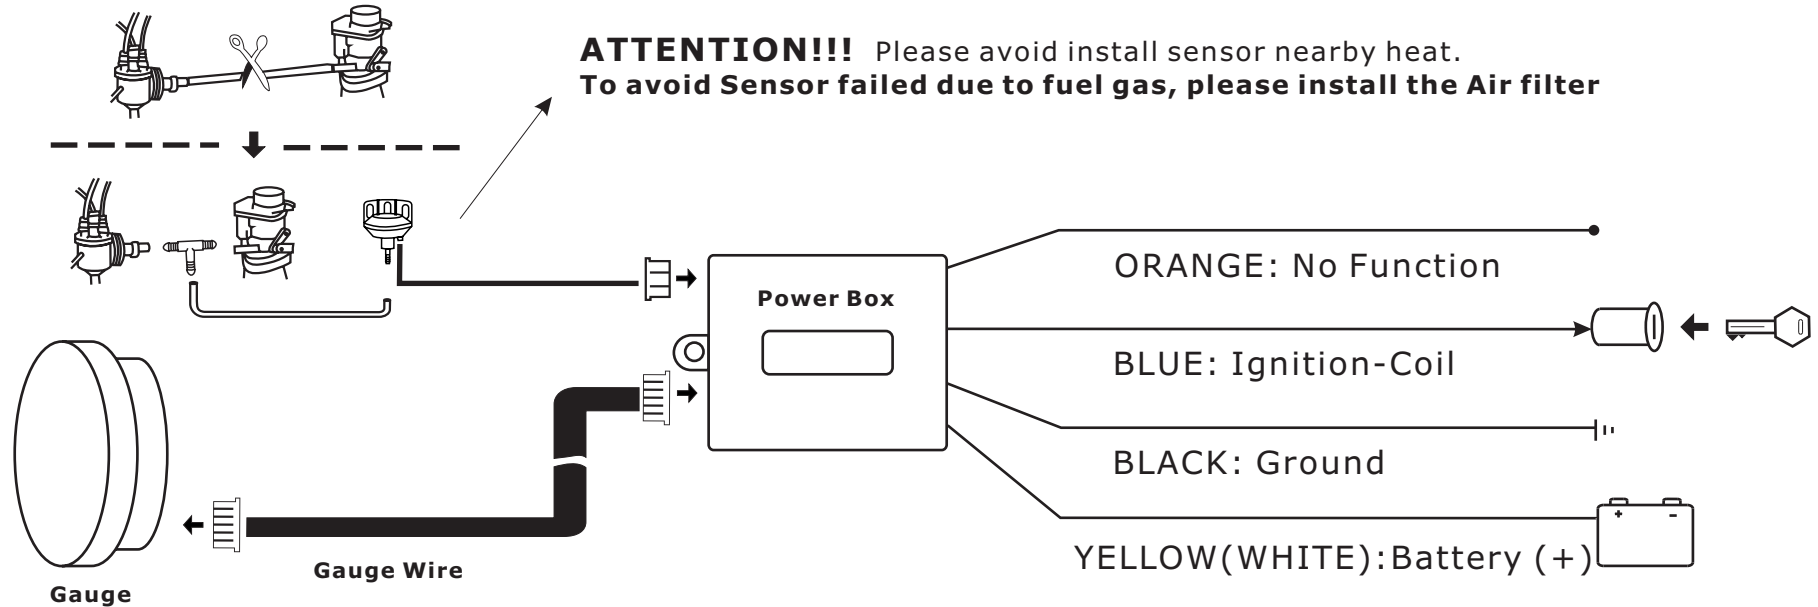

To avoid damage, please ensure the BLUE wire is attached to the ignition switch that connected to Coil.

## Ignition Switch Diagram

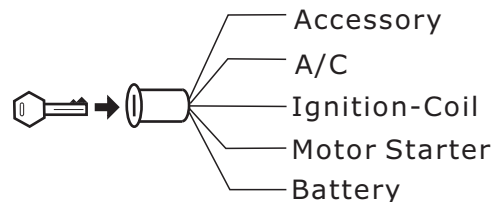

### ⚠ WARNING


1. Please must follow all installations in this manual to ensure safe installation and operation of the product.
2. DO NOT disassemble or reassemble the product. This might cause damage or make them unsafe to use.  
When the product is disassembled or reassembled, the Warranty can't be offered.
3. Before installation, please make sure the engine is switched off and the vehicle is stationary.
4. Due to possible injury from contact with a hot engine or exhaust pipe, DO NOT begin installation until the vehicle is cool.
5. When attaching wires for the product, please take care so that the product's wires do not interfere with existing wires.
6. This product is only for use on vehicles with 12V electronic system.

### ⚠ CAUTION

1. Please avoid install sensor nearby heat.
2. To avoid disconnection of rubber hose during pipe installation, suggest using tie-wraps to tie up.

# Remote Controller Operation Manual - Boost Gauge





## Tips of Remote Controller Operation

1. Please have the remote controller point to the gauge you are going to set up.
2. In setting process, idle any button for 5 seconds or press  directly; the gauge will leave setting mode and save automatically.
3. A "beep" sound will be heard while the new setting is done.






### • Sensor Failure warning Function

After Booting, the gauge buzzer will show the warning sound about 20 seconds if the sensor is failed.







### • Color Setting

1. Select Boost Gauge icon by press  on Remote Controller.
2. Then press  for entering the color selection mode. Again, press the  for different color selection. Press  or idle any button for 5 seconds to leave the setting mode.




 
### • Brightness Adjust Setting

1. Select Boost Gauge icon by press  on Remote Controller.
2. Then press  for entering the color selection mode. Long press  to increase the brightness or long press  to decrease. Press  or idle any button for 5 seconds to leave the setting mode.






### • Warning Value Setting (When the value is exceeded, the warning will be functional)

1. Select BOOST Gauge icon by press  on Remote Controller.
2. Press  or  for entering the warning setting mode. Press  or  to adjust the warning value. Press  or idle any button for 5 seconds to leave the setting mode.

### • Peak Value Setting

1. Select Boost Gauge icon by press  on Remote Controller.
2. Press  to display peak value record, or, press  to clear peak value record. Press  or idle any button for 5 seconds to leave the setting mode.


### • Turbo Timer Setting

1. Select Boost Gauge icon by press  on Remote Controller.
2. Press  to enter the timer setting mode. Press  to increase the timer delay setting, or, press  to decrease, max. to 120 seconds. Press  or idle any button for 5 seconds to leave the setting mode.

# Daemon II Operation Manual - Voltage Gauge


**Package Contents** Gauge\*1 / Power Box\*1 / Gauge Wire (6pin)\*1 / Gauge Stand\*1 / Operation Manual\*1

## Installation Diagram (Need Turbo Timer)

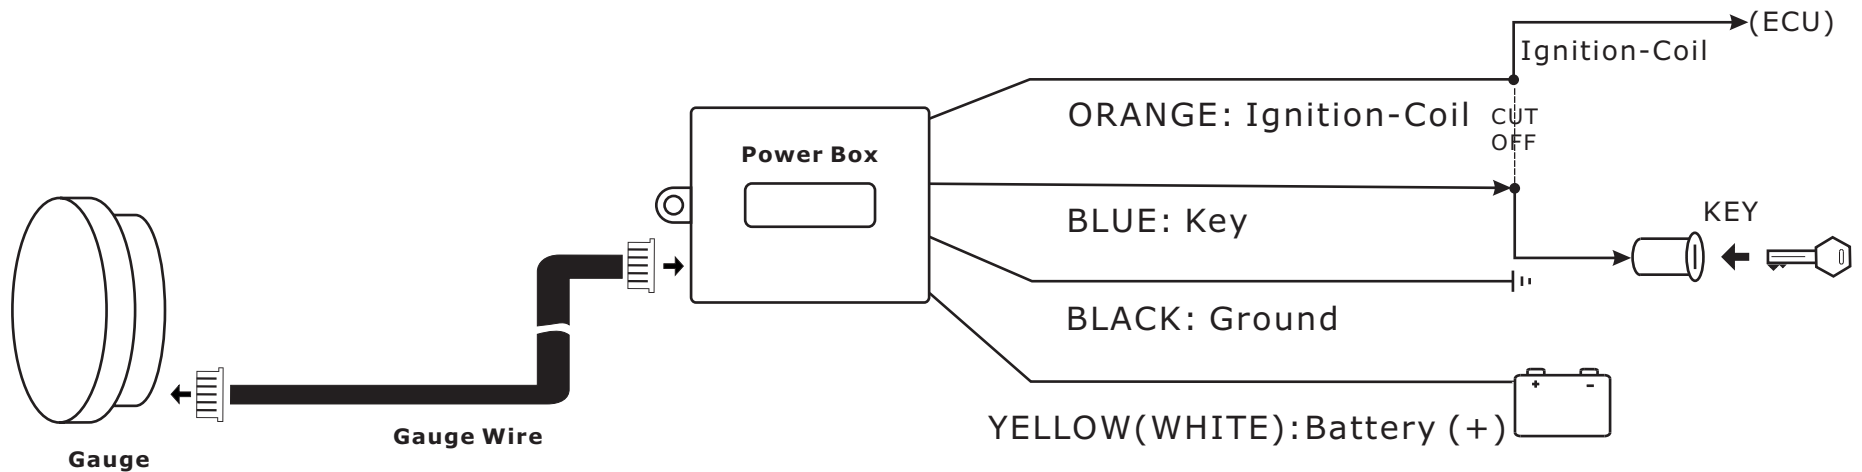

To avoid damage, please ensure the ORANGE wire is attached to the ignition switch that connected to Coil.

## Ignition Switch Diagram

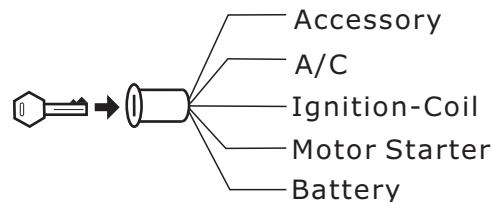

### **⚠ WARNING**

1. Please must follow all installations in this manual to ensure safe installation and operation of the product.
2. DO NOT disassemble or reassemble the product. This might cause damage or make them unsafe to use. When the product is disassembled or reassembled, the Warranty can't be offered.
3. Before installation, please make sure the engine is switched off and the vehicle is stationary.
4. Due to possible injury from contact with a hot engine or exhaust pipe, DO NOT begin installation until the vehicle is cool.
5. When attaching wires for the product, please take care so that the product's wires do not interfere with existing wires.
6. This product is only for use on vehicles with 12V electronic system.


### **⚠ CAUTION**

1. To avoid disconnection of rubber hose during pipe installation, suggest using tie-wraps to tie up.

# Daemon II Operation Manual - Voltage Gauge

**Package Contents** Gauge\*1 / Power Box\*1 / Gauge Wire (6pin)\*1 / Gauge Stand\*1 / Operation Manual\*1

## Installation Diagram (No Need Turbo Timer)

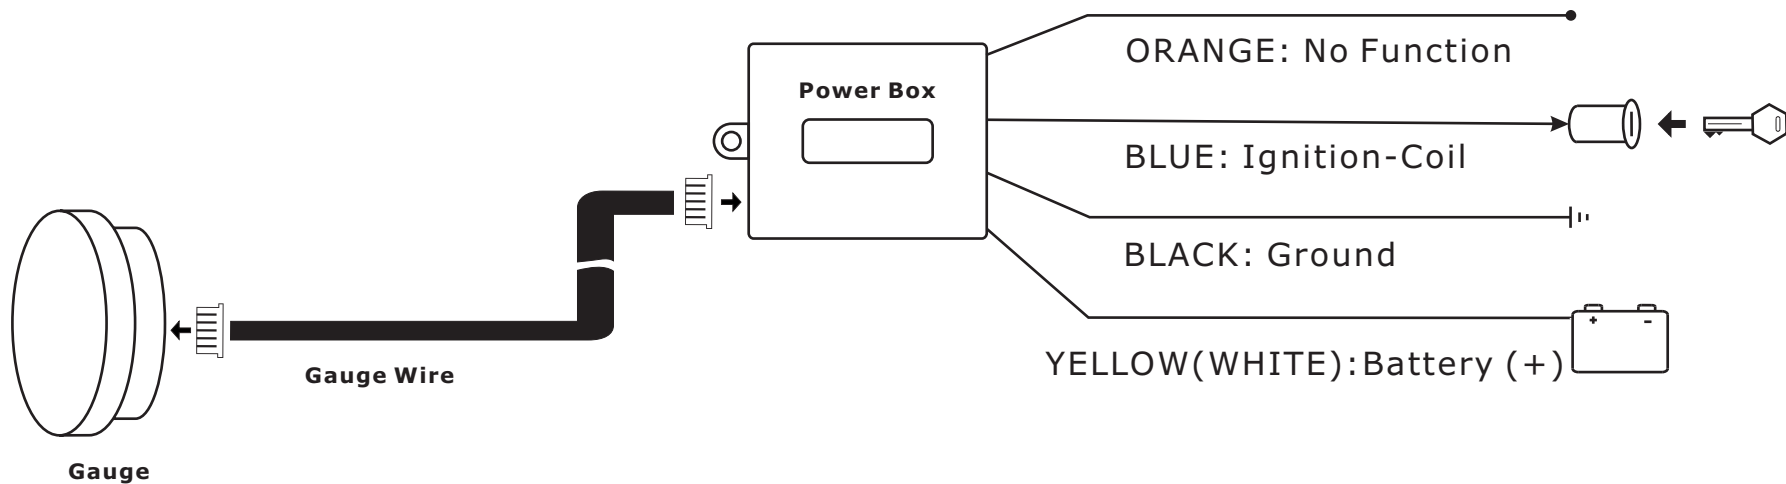


To avoid damage, please ensure the BLUE wire is attached to the ignition switch that connected to Coil.

### WARNING


1. Please must follow all installations in this manual to ensure safe installation and operation of the product.
2. DO NOT disassemble or reassemble the product. This might cause damage or make them unsafe to use. When the product is disassembled or reassembled, the Warranty can't be offered.
3. Before installation, please make sure the engine is switched off and the vehicle is stationary.
4. Due to possible injury from contact with a hot engine or exhaust pipe, DO NOT begin installation until the vehicle is cool.
5. When attaching wires for the product, please take care so that the product's wires do not interfere with existing wires.
6. This product is only for use on vehicles with 12V electronic system.

## Ignition Switch Diagram

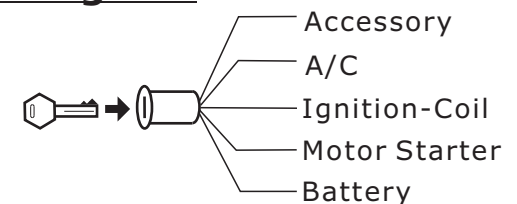

# Remote Controller Operation Manual - Voltage Gauge





## **Tips of Remote Controller Operation**

1. Please have the remote controller point to the gauge you are going to set up.
2. In setting process, idle any button for 5 seconds or press  directly; the gauge will leave setting mode and save automatically.
3. A "beep" sound will be heard while the new setting is done.






### **• Sensor Failure warning Function**

After Booting, the gauge buzzer will show the warning sound about 20 seconds if the sensor is failed.


 
 



### **• Color Setting**

1. Select Voltage Gauge icon by press  on Remote Controller.
2. Then press  for entering the color selection mode. Again, press the  for different color selection. Press  or idle any button for 5 seconds to leave the setting mode.





### **• Brightness Adjust Setting**

1. Select Voltage Gauge icon by press  on Remote Controller.
2. Then press  for entering the color selection mode. Long press  to increase the brightness or long press  to decrease. Press  or idle any button for 5 seconds to leave the setting mode.





 
### **• Warning Value Setting (When the value is below, the warning will be functional)**

1. Select Voltage Gauge icon by press  on Remote Controller.
2. Press  or  for entering the warning setting mode. Press  or  to adjust the warning value. Press  or idle any button for 5 seconds to leave the setting mode.

### **• Peak Value Setting**

1. Select Voltage Gauge icon by press  on Remote Controller.
2. Press  to display peak value record, or, press  to clear peak value record. Press  or idle any button for 5 seconds to leave the setting mode.


### **• Turbo Timer Setting**

1. Select Voltage Gauge icon by press  on Remote Controller.
2. Press  to enter the timer setting mode. Press  to increase the timer delay setting, or, press  to decrease, max. to 120 seconds. Press  or idle any button for 5 seconds to leave the setting mode.

# Daemon II Operation Manual - Vacuum Gauge


**Package Contents** Gauge\*1 / Sensor\*1 / Sensor Wire(3pin)\*1 / Power Box\*1 / Gauge Wire (6pin)\*1 / Air Filter\*1  
Three Way Joint\*1 / Rubber Hose\*1 / Gauge Stand\*1 / Operation Manual\*1

## Installation Diagram

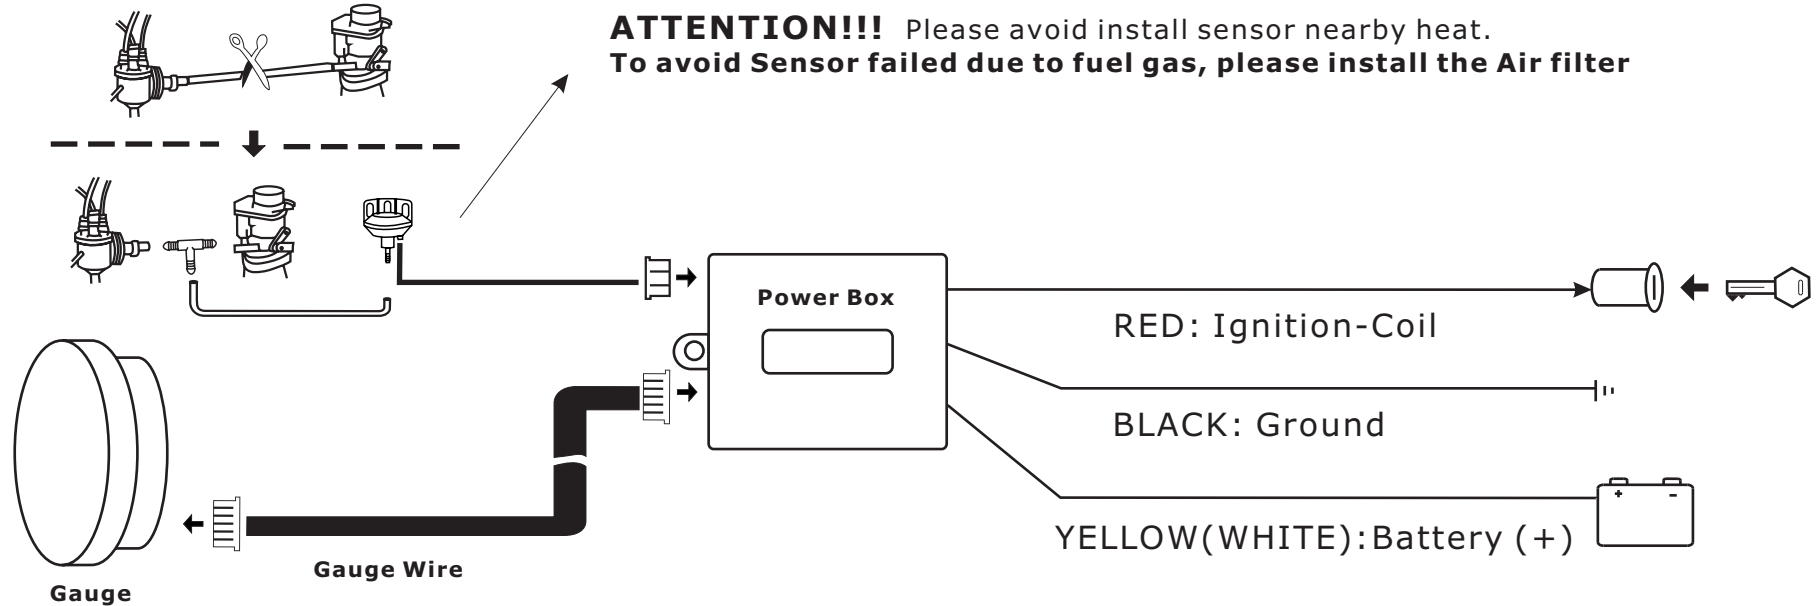

To avoid damage, please ensure the RED wire is attached to the ignition switch that connected to Coil.

## Ignition Switch Diagram

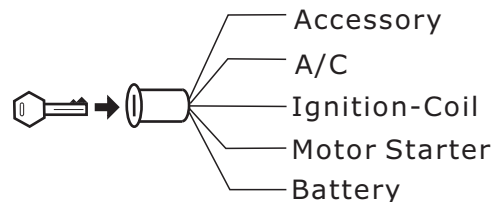

### ⚠ WARNING

1. Please must follow all installations in this manual to ensure safe installation and operation of the product.
2. DO NOT disassemble or reassemble the product. This might cause damage or make them unsafe to use. When the product is disassembled or reassembled, the Warranty can't be offered.
3. Before installation, please make sure the engine is switched off and the vehicle is stationary.
4. Due to possible injury from contact with a hot engine or exhaust pipe, DO NOT begin installation until the vehicle is cool.
5. When attaching wires for the product, please take care so that the product's wires do not interfere with existing wires.
6. This product is only for use on vehicles with 12V electronic system.

### ⚠ CAUTION

1. Please avoid install sensor nearby heat.
2. To avoid disconnection of rubber hose during pipe installation, suggest using tie-wraps to tie up.

# Remote Controller Operation Manual - Vacuum Gauge

## **Tips of Remote Controller Operation**

1. Please have the remote controller point to the gauge you are going to set up.
2. In setting process, idle any button for 5 seconds or press (SET) directly; the gauge will leave setting mode and save automatically.
3. A "beep" sound will be heard while the new setting is done.

### **• Sensor Failure warning Function**

After Booting, the gauge buzzer will show the warning sound about 20 seconds if the sensor is failed.

### **• Color Setting**

1. Select Vacuum Gauge icon by press (VAC) on Remote Controller.
2. Then press (R/GB) for entering the color selection mode. Again, press the (R/GB) for different color selection. Press (SET) or idle any button for 5 seconds to leave the setting mode.

### **• Brightness Adjust Setting**

1. Select Vacuum Gauge icon by press (VAC) on Remote Controller.
2. Then press (R/GB) for entering the color selection mode. Long press (▲) to increase the brightness or long press (▼) to decrease. Press (SET) or idle any button for 5 seconds to leave the setting mode.

### **• Warning Value Setting (When the value is below, the warning will be functional)**

1. Select Vacuum Gauge icon by press (VAC) on Remote Controller.
2. Press (F/P) or (WN) for entering the warning setting mode. Press (▲) or (▼) to adjust the warning value. Press (SET) or idle any button for 5 seconds to leave the setting mode.

### **• Peak Value Setting**


1. Select Vacuum Gauge icon by press (VAC) on Remote Controller.
2. Press (▲) to display peak value record, or, press (▼) to clear peak value record. Press (SET) or idle any button for 5 seconds to leave the setting mode.



# Daemon II Operation Manual - Exhaust Temp. Gauge

**Package Contents** Gauge\*1 / Sensor\*1 / Sensor Wire(2pin)\*1 / Power Box\*1 / Gauge Wire (6pin)\*1 / Gauge Stand\*1 / Operation Manual\*1

## Installation Diagram

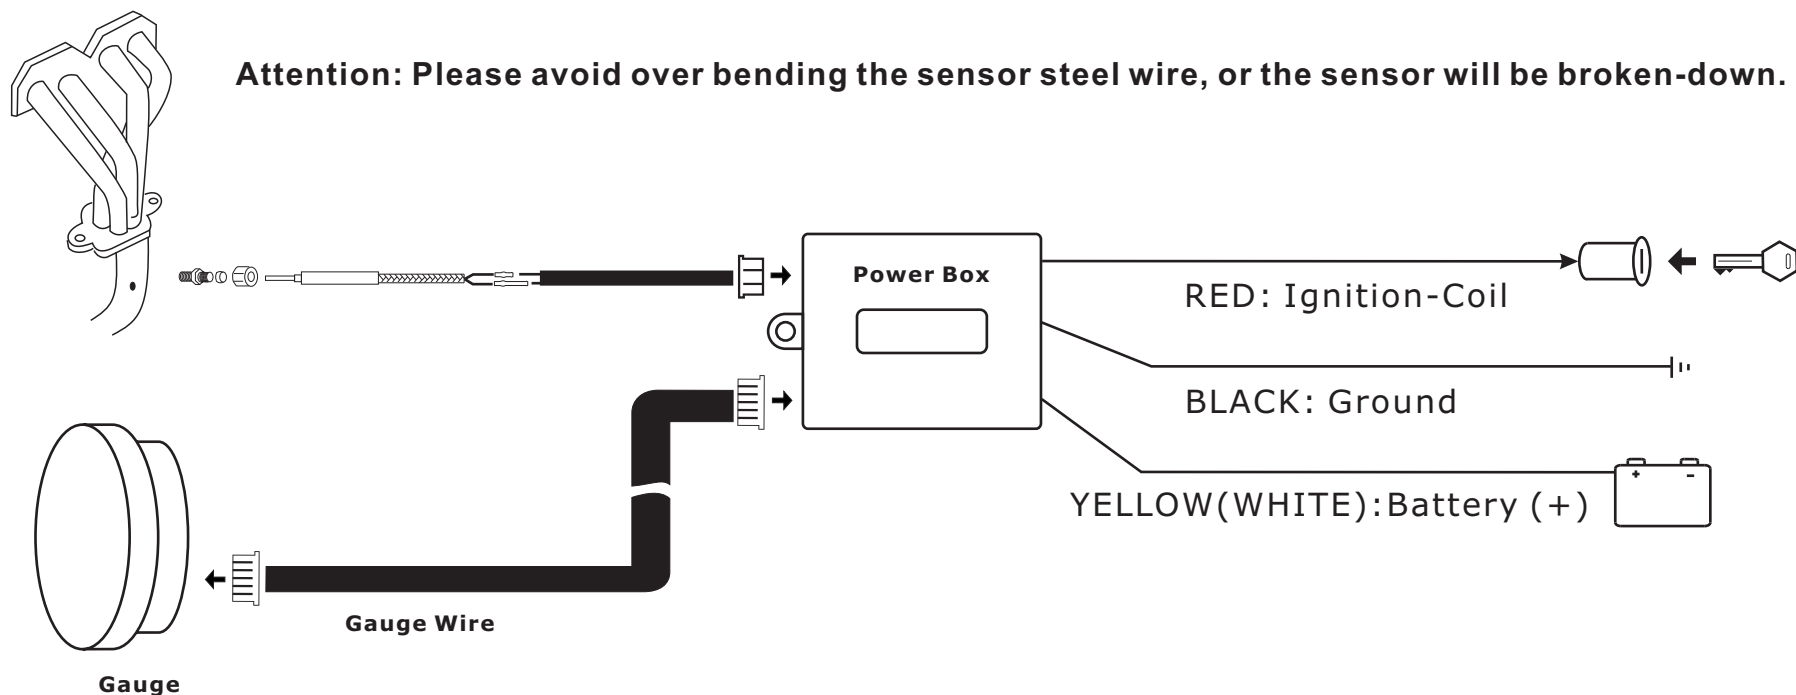


To avoid damage, please ensure the RED wire is attached to the ignition switch that connected to Coil.

## WARNING


1. Please must follow all installations in this manual to ensure safe installation and operation of the product.
2. DO NOT disassemble or reassemble the product. This might cause damage or make them unsafe to use. When the product is disassembled or reassembled, the Warranty can't be offered.
3. Before installation, please make sure the engine is switched off and the vehicle is stationary.
4. Due to possible injury from contact with a hot engine or exhaust pipe, DO NOT begin installation until the vehicle is cool.
5. When attaching wires for the product, please take care so that the product's wires do not interfere with existing wires.
6. This product is only for use on vehicles with 12V electronic system.

## Ignition Switch Diagram

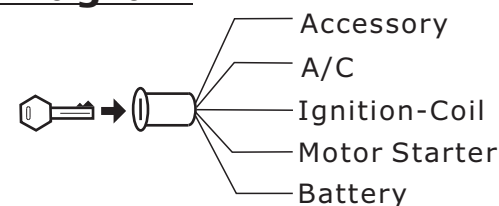

# Remote Controller Operation Manual - Exhaust Temp. Gauge





## **Tips of Remote Controller Operation**

1. Please have the remote controller point to the gauge you are going to set up.
2. In setting process, idle any button for 5 seconds or press  directly; the gauge will leave setting mode and save automatically.
3. A "beep" sound will be heard while the new setting is done.






### **• Sensor Failure warning Function**

After Booting, the gauge buzzer will show the warning sound about 20 seconds if the sensor is failed.







### **• Color Setting**

1. Select Exhaust Temp. Gauge icon by press  on Remote Controller.
2. Then press  for entering the color selection mode. Again, press the  for different color selection. Press  or idle any button for 5 seconds to leave the setting mode.





### **• Brightness Adjust Setting**

1. Select Exhaust Temp. Gauge icon by press  on Remote Controller.
2. Then press  for entering the color selection mode. Long press  to increase the brightness or long press  to decrease. Press  or idle any button for 5 seconds to leave the setting mode.

### **• Warning Value Setting (When the value is exceeded, the warning will be functional)**

1. Select Exhaust Temp Gauge icon by press  on Remote Controller.
2. Press  or  for entering the warning setting mode. Press  or  to adjust the warning value. Press  or idle any button for 5 seconds to leave the setting mode.


### **• Peak Value Setting**

1. Select Exhaust Temp. Gauge icon by press  on Remote Controller.
2. Press  to display peak value record, or, press  to clear peak value record. Press  or idle any button for 5 seconds to leave the setting mode.

# Daemon II Operation Manual - Air Fuel Ratio Gauge

**Package Contents** Gauge\*1 / Power Box\*1 / Gauge Wire (6pin)\*1 / Gauge Stand\*1 / Operation Manual\*1

## Installation Diagram

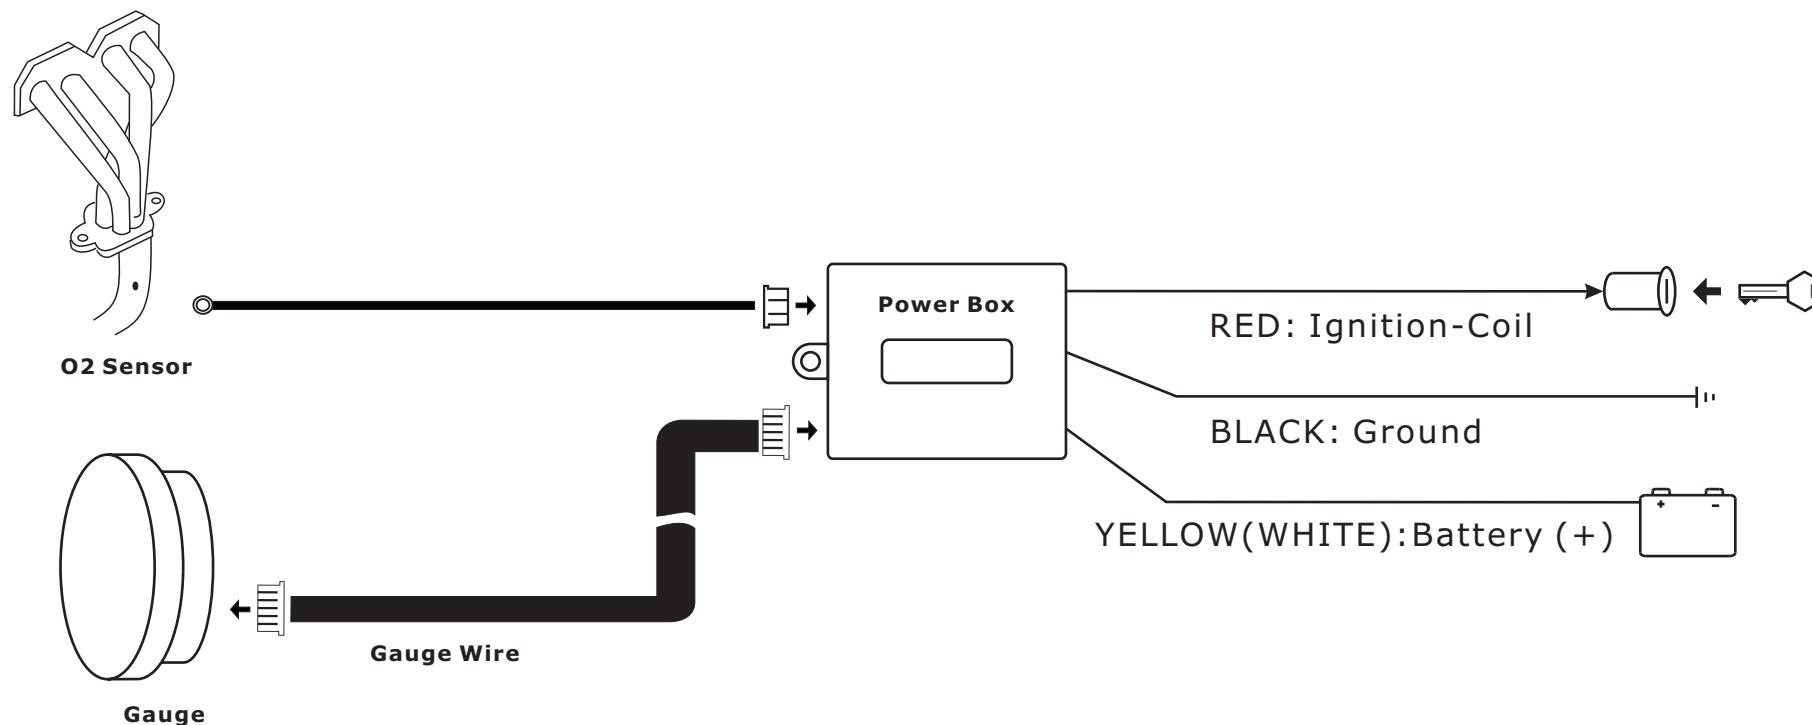


To avoid damage, please ensure the RED wire is attached to the ignition switch that connected to Coil.

## WARNING


1. Please must follow all installations in this manual to ensure safe installation and operation of the product.
2. DO NOT disassemble or reassemble the product. This might cause damage or make them unsafe to use. When the product is disassembled or reassembled, the Warranty can't be offered.
3. Before installation, please make sure the engine is switched off and the vehicle is stationary.
4. Due to possible injury from contact with a hot engine or exhaust pipe, DO NOT begin installation until the vehicle is cool.
5. When attaching wires for the product, please take care so that the product's wires do not interfere with existing wires.
6. This product is only for use on vehicles with 12V electronic system.

## Ignition Switch Diagram

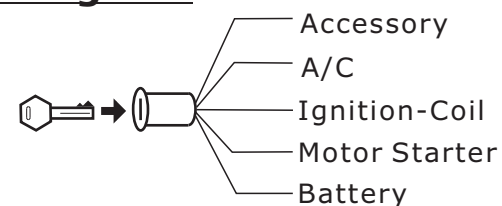

# Remote Controller Operation Manual - Air Fuel Ratio Gauge





## Tips of Remote Controller Operation

1. Please have the remote controller point to the gauge you are going to set up.
2. In setting process, idle any button for 5 seconds or press  directly; the gauge will leave setting mode and save automatically.
3. A "beep" sound will be heard while the new setting is done.






### • Sensor Failure warning Function

After Booting, the gauge buzzer will show the warning sound about 20 seconds if the sensor is failed.

### • Color Setting

1. Select Air Fuel Ratio Gauge icon by press  on Remote Controller.
2. Then press  for entering the color selection mode. Again, press the  for different color selection. Press  or idle any button for 5 seconds to leave the setting mode.





### • Brightness Adjust Setting

1. Select Air Fuel Ratio Gauge icon by press  on Remote Controller.
2. Then press  for entering the color selection mode. Long press  to increase the brightness or long press  to decrease. Press  or idle any button for 5 seconds to leave the setting mode.

### • Warning Value Setting - Original Default Setting

Default Setting: When same value keeps over 5secs, the WARNING (Beep sound + LED flickeringly) will be functional.

### • Peak Value Setting

1. Select Air Fuel Ratio Gauge icon by press  on Remote Controller.
2. Press  to display peak value record, or, press  to clear peak value record. Press  or idle any button for 5 seconds to leave the setting mode.